

ORION®

USER'S MANUAL WATER KETTLE ORION Model: ORK-0334 (English)



<http://www.orion.ua>

Dear Customer,
Thank you for buying ORION products! Welcome to use!
Please read this User's Guide carefully before use and save it.
Best regards,
ORION ELECTRONICS Team
More details: <http://www.orion.ua>
Mail to us: support@orion.ua

BEFORE FIRST USE

Read and follow all the instructions in this "Use And Care" even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning "IMPORTANT SAFEGUARDS", "FOR YOUR SAFETY", and "SERVICE" statements.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information card. Retain in the event that warranty service is required.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.


WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product rating label.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The instructions for appliances normally cleaned after use, and not intended to be immersed in water for cleaning.
- Do not operate the product when the cord or plug is damaged, or when the product malfunctions or appears damaged in any way. Return the complete product to the place of purchase for repair or replacement.
- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid.
- Switch off and unplug from outlet before filling, emptying, when not in use or before cleaning.
- Always keep kettle level when switched on
- **Do not overfill.** If the kettle is overfilled beyond the Maximum fill mark, water may be ejected from the spout when boiling.
- Do not boil unless the lid is firmly closed.
- Never leave the product unattended when in use.
- Do not let the power cord hang over the edge of counter or table.
- Do not operate or place any part of this product on or near any hot surface such as a

gas or electric burner, hotplate or heated oven.

- Avoid touching hot surfaces. Use the cover and handle.
- Use the kettle with the correct matching power base as supplied (and vice versa).
- Do not use any attachments or accessories other than those that come together with the unit.
- This product is intended for normal domestic/household use only.
- This kettle only be use with the base provided ,do not change to any other bases.
- **WARNING:** Do not remove the lid while the water is boiling.

READ AND SAVE THESE INSTRUCTIONS

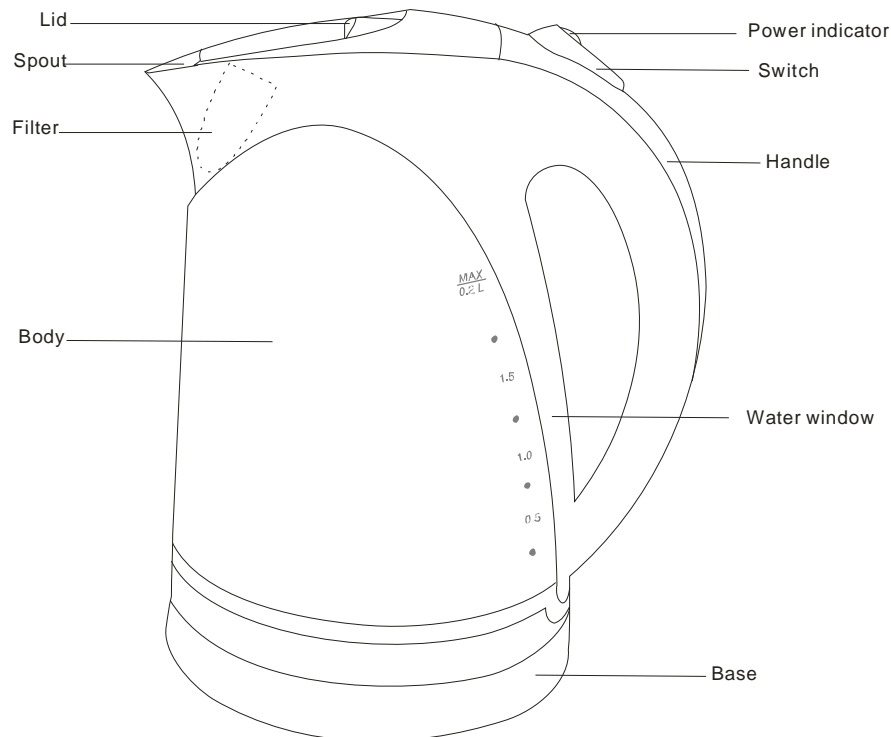

HOW TO USE YOUR AUTOMATIC KETTLE.

- Before first use remove all packaging materials from the kettle and power base.
- With the power switch in the “OFF” position and the kettle removed from the base, fill the kettle to the desired level. Do not fill above the MAX mark.
(The first time the kettle is used, or it has been unused for a long period of time, it is recommended that the kettle be rinsed, filled to maximum and boiled. The water should then be discarded, the kettle rinsed and refilled with cold water.)
CAUTION: If the kettle is overfilled there is a danger that boiling water may be ejected from the spout.
- Place the cordless base on a dry level surface.
- Place the kettle on the base.
NOTE: The kettle must only be used with the matching cordless base supplied.
- Before operating the kettle ensure that the kettle is filled to the Minimum mark.
- Ensure the kettle is in the “OFF” position (switch up) and connect the power supply cord to a power outlet of the same voltage and frequency as detailed on the Product Identification Plate.
- To start the kettle heating, push the switch to the “ON” position (switch down). The power indicator light will glow.
- When the water has boiled the kettle will switch “OFF”. If required, the water may be brought back to the boil by pressing the switch to “ON”.

- The kettle may be switched “OFF” at any time by pressing the switch on the handle to the “OFF” position.
- **IMPORTANT:** Make a habit of switching the power “OFF” at the power outlet before removing or replacing the kettle on the base or when the kettle is not attended.
- Do not use hot tap water to fill the kettle. Use only cold water. Allow the cold water to run for three to four seconds before filling the kettle.
- If any plastic taste from the kettle is found it can be removed by filling the kettle to maximum and adding a teaspoon of bicarbonate of soda to the water. Boil and discard the water, rinse out with cold water.

AUTOMATIC SAFETY CUT-OUT

An automatic cut out is fitted for protection against boil-dry overheating. It will operate if the kettle is switched on when containing insufficient water. If this should occur, switch off and remove the power cord from the power outlet. Allow the kettle to cool for 10 minutes then refill with cold water and connect to power supply.

CARE OF YOUR PRODUCT

- Avoid the use of solvents, polish, abrasive or aerosol cleaners as they may damage surfaces of the product. The inside of the kettle may be cleaned using a mild detergent, however it must be thoroughly rinsed before re-use. Clean the exterior of the kettle by wiping with a slightly dampened soft cloth. Make sure the kettle is thoroughly dried before reconnecting to the power supply.
NOTE: Do not immerse the base or kettle in water or any other liquid.
- Furring up is a common problem in hard water areas, and it is recommended to descale the kettle regularly. To descale, fill the kettle with 1L of water and add 50ml vinegar. Bring to the boil and allow to stand overnight. Next day, reboil and pour away and refill the kettle with fresh water, and bring to the boil again. This water must also be poured away.
NOTE: Normal commercial descalers for kettles may also be used. Follow the instructions for the given descaler.

SERVICE

- Do not operate the kettle with a damaged cord or plug, or after the kettle malfunctions, or appears damaged in any manner. Return the complete kettle to the place of purchase or address noted in warranty information for inspection, repair or replacement.
- In some products, the replacement by the user of the flexible cord is not intended. Special tools are required to dis-assemble the product or replace the cord. Return the complete product to the place of purchase or address noted in warranty information for inspection, repair or replacement.

CAUTION: To reduce the risk of electric shock, do not dis-assemble the product. No user serviceable parts inside. Refer all service to an authorised service facility.

Subject to change without notice

Extra information on ORION company web-site www.orion.ua

We take your opinion and offers by E-mail support@orion.ua