

ORION[®]

INSTRUCTION MANUAL

**MANICURE AND PEDICURE
SET
Model: OR-MPS01**

ENGLISH GB



Dear Customers, Thank you for buying ORION products!

Welcome to use!


Read the instructions for use carefully before using the appliance and save them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Please read carefully before using your MANICURE & PEDICURE SET

1. Your Manicure & Pedicure Set is designed exclusively for domestic use.
2. To maintain the unit in good operating condition it is recommended that the appliance be switched off for 15 minutes after each 20-minute uninterrupted treatment.
3. Before connecting the unit to the electrical outlet, make sure the voltage on the adapter's rating plate corresponds to the local voltage.
4. Keep the appliance out of children's reach. Close supervision is necessary when using the appliance by, on or near children, invalids or disabled persons.
5. Do not use the e unit when bathing or showering.
6. Do not place or store the unit where it may fall or be pulled into a tub or sink.
7. Do not submerge or drop into water or any other liquid.
8. Do not try to reach for the appliance if it falls into water: unplug it immediately.
9. Do not use it under a blanket or pillow to avoid overheating.
10. Never operate the appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has fallen into water.
11. Do not carry the appliance by its power cord or use the cord as a handle.
12. Keep the appliance and cord away from hot surfaces.
13. If the unit malfunctions, do not attempt to repair the appliance yourself. Contact an authorized service center for repair.
14. Only use this appliance for its intended use as described in this manual.
15. Enjoy your manicure and pedicure treatment in the comfort of your home.

PARTS

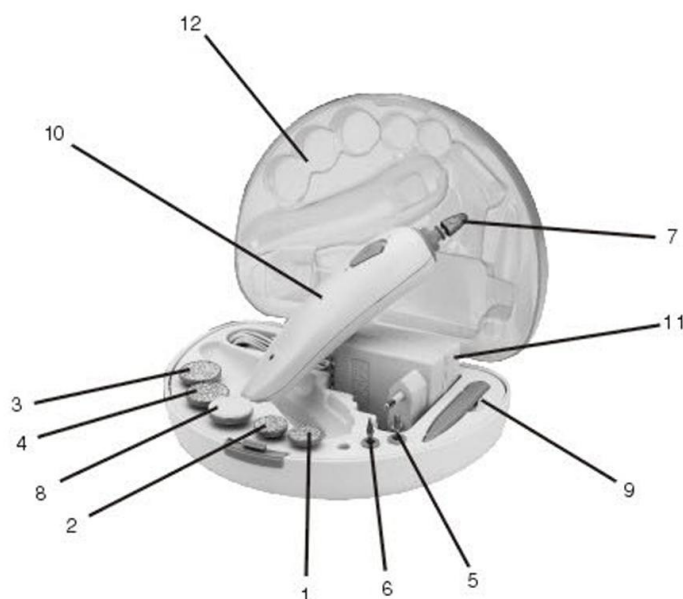

1. Fine Shaping Disk
2. Rough Shaping Disk
3. Fine Skin Remover
4. Rough Skin Remover
5. Thick Sharp Point
6. Thin Sharp Point
7. Fine Grain Cone
8. Polishing Disk
9. Cuticle Lifter
10. Main Body
11. Adapter
12. Plastic Box

HOW TO RECHARGE

For cordless use, you have to recharge the unit for at least 24 hours for the first use to ensure the batteries are fully charged. The normal recharge time is 4-6 hours for full charge. Work time in cordless use is about 2 hours.

- To recharge, turn the switch to "0" (off) position.
- Connect unit to the charger and plug the adapter into the socket.
- The LED-charging indicator will light up to ensure proper charging.
- Unplug charger before use.

DIRECT-DRIVE BY ADAPTER

The unit can be direct-driven by the adapter (supplied with unit) when the batteries are empty. Do not use other adapters.

- Connect unit to the adapter.
- Plug the adapter into the socket for direct use.
- In case of direct use by adapter with empty batteries, you have to wait for 30 seconds in order to let the unit run at full power.

HOW TO USE YOUR MANICURE & PEDICURE SET

- Plug the adapter into the mains outlet, checking first that the voltage on the rating plate corresponds to the mains outlet that is to be used.
- Now your Manicure & Pedicure Set is ready for use.
- Choose one of the interchangeable attachments with the product and start your treatment by applying the switch.

Note: For better performance from the product, do not bathe your feet before treatment. Do it once you have finished.

INTERCHANGEABLE ATTACHMENTS

- To connect the attachments to the main body, directly plug them in.
- To remove them, pull out from the head.

Here are some suggestions on how to use the different attachments:

FINE AND ROUGH SHAPING DISK: (fine and rough grain) 2 attachments for your choice.

It shapes even thick and hard nails. File and shape your nails. Choose the one that most suits your nail's thickness.

FINE AND ROUGH SKIN REMOVER: (2 attachments) to treat hard skin on heels, on toes and anywhere where hard skin is present. Choose the one that suits your skin.

THICK SHARP POINT: to file and treat the surface of thick toenails.

THIN SHARP POINT: to remove dead skin and treat in-grown nails. Use with movements from the outside inwards

FINE GRAIN CONE: to eliminate rough skin and corns.

POLISHING DISK: to smooth round nail edges after filing and to polish nail surface.

CUTICLE LIFTER: for lifting up the cuticle.

MAINTENANCE AND CLEANING

1. The power adapter provided has been especially designed for your MANICURE & PEDICURE SET. If damaged, it must be replaced with an original adapter.
2. Avoid dropping the unit to prevent internal parts from being damaged.
3. Always unplug the adapter before cleaning the unit.
4. Never use liquids or abrasive cleaners to clean the housing of the unit and the case. Just wipe off with a damp cloth.
5. The attachments can be cleaned from time to time with alcohol (70to90%)

CHARACTERISTICS

- Manicure and pedicure set
- 9 attachments
- Cord and cordless use
- Power supply: AC230V ~50Hz, DC 2,4V 1000mA
- Power: 2,4W
- Protection against electric shock: Class II
- Net/gross weight: 103.90g/194.15g
- Product size: 57.2x35x147mm
- Box size: 214x81x157mm
- Color: white/blue

Subject to change without notice
Extra information on ORION company web-site www.orion.ua
We take your opinion and offers by E-mail support@orion.ua