

## INSTRUCTION MANUAL

### WEATHER STATION

Model: OR-WS001, OR-WS002

ENGLISH

GB

Dear customers! Thank you for purchasing ORION products. Before operation, please read this instruction manual. Save it for future reference.



OR-WS001



OR-WS002

### IMPORTANT SAFETY INSTRUCTIONS

- This appliance should be used only for its intended purposes. Any other use of it is wrong and therefore dangerous. Manufacturer is not liable for damages that are the result of improper or incorrect use of the appliance. Under these conditions, the guarantee will be cancelled.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not immerse the appliance in water.
- Don't expose the item to rain or moisture.
- Do not allow children to play with this appliance.
- The appliance is not intended for commercial use.
- Place the appliance on steady and flat surface.

### CHARACTERISTICS

- Indoor and outdoor temperature display
- Time display
- 12/24 hour format
- Alarm function
- MAX/MIN temperature memory function
- °C/°F switchover
- Power supply:
  - OR-WS001: 1\* AG8 button cell, 1.5V (included)
  - OR-WS002: 1\* AG10 button cell, 1.5V (included)

## HOW TO USE

### Time setting

1. At normal status, press “TIME” key for two seconds to enter the status of “12Hr/24Hr”, then press the same key again to enter the setting status of zero-second, hour, minute, year, month, date. The day will be changed automatically. Back to normal time display if not any key operation in 30 seconds.
2. At normal status, press “TIME” key once to switch between TIME and DATE status.
3. At normal status, press “UP” key to switch between SECOND and DAY display.

### Alarm function

1. At normal status, press “ALARM” key to enter alarm status, then press “ALARM” key for two seconds to enter the setting of alarm in sequence: hour—minute—confirm.
2. At alarm status, press “UP” key once to switch the ON/OFF of the alarm.
3. Back to normal time display if not any key operation in 30 seconds.
4. The bell symbol 🔔 will flash during alarming and lasts for 30 seconds.

### MAX/MIN temperature memory function

1. Press MAX/MIN key to switch: MAX—MIN—normal, back to normal if no key press in 8 seconds.
2. Press MAX/MIN key for 2 seconds to clear the record of MAX/MIN temperature

### Freeze alarm function

1. At normal status, press °C/°F key for 2 seconds to turn ON/OFF the outdoor freeze alarm function
2. When the freeze alarm function is ON, the outdoor temperature is between “-1°C” and “4°C”, the freeze symbol will flash.

### Note:

- The battery compartment is sized for two batteries but only one is required. Insert the battery on the right side with the metal contact.
- The indoor temperature testing scope: -10°C ~ 50°C
- The outdoor temperature testing scope: -20°C ~ 50°C