

## INSTRUCTION MANUAL

### WEATHER STATION

Model: OR-WS003

ENGLISH

GB

Dear customers! Thank you for purchasing ORION products. Before operation, please read this instruction manual. Save it for future reference.



### IMPORTANT SAFETY INSTRUCTIONS

- This appliance should be used only for its intended purposes. Any other use of it is wrong and therefore dangerous. Manufacturer is not liable for damages that are the result of improper or incorrect use of the appliance. Under these conditions, the guarantee will be cancelled.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not immerse the appliance in water.
- Don't expose the item to rain or moisture.
- Do not allow children to play with this appliance.
- The appliance is not intended for commercial use.
- Place the appliance on steady and flat surface.

### CHARACTERISTICS

- Indoor and outdoor temperature display
- Time display
- 12/24 hour format
- Alarm function
- MAX/MIN temperature memory function
- °C/°F switchover
- Working condition:
  - Indoor unit: -10°C ~ +50°C (14°F ~ +122°F)
  - Outdoor unit: -40°C ~ +70°C (-58°F ~ +158°F)
- Power supply: 2\*AAA batteries, 3V (excluded)

## HOW TO USE

### Time setting:

1. Under normal mode, press SET for 3 seconds to time setting, the digits setted is blinking. Setting sequence: 12/24 hour format→hour→minute→exit.
2. Press SET to confirm and advance to another setting. Press UP once and ahead, press for 3 seconds, go ahead at an 8 step per second speed. Press DOWN once and back, press for 3 seconds, go back at an 8 step per second speed.
3. Without any effect handling more than 8 seconds, it returns from setting automatically.

Note: The default is 24 hour format.

### Alarm setting:

1. Press SET to switch alarm and time display.
2. Under alarm mode, press SET for 3 seconds to alarm setting, the digits setted is blinking.
3. Setting sequence: hour→minute→exit→normal mode
4. Press SET to confirm and advance to another setting.
5. Enter alarm setting mode, alarm will auto ON after setting finished. Press SNZ for 3 seconds to turn on/off alarm.

### Snooze function

When the alarm ring, press SNZ to stop the alarm and turn on snooze function, alarm will start again after 8 minutes; Or press any other key to stop the alarm, no more alarm in the same day.

### Temperature:

1. Put the wire outside to receive the outdoor temperature.
2. Under normal mode, press UP to switch temperature: MAX value→MIN value→current value.
3. Press UP once, display MAX indoor and outdoor temperatures, then press SET to clear the MAX records (the display will be with "MAX" and "---.-"). It will auto back to current temperature after 15 seconds or press UP twice.
4. Press UP twice, display MIN indoor and outdoor temperatures, then press SET to clear the MIN records (the display will be with "MIN" and "---.-"). It will auto back to current temperature after 15 seconds or press UP once.

Under normal mode, press DOWN or °C/°F to switch °C/°F

### Note:

When the actual temperature is higher than working condition, HH.H will be displayed; when actual temperature is lower than working condition, LL.L will be displayed.