

ORION®

USER'S GUIDE

ULTRASONIC HUMIDIFIER

English

GB

MODEL ORION ORH-022A, ORH-022O, ORH-022F, ORH-022B, ORH-022U

ORH-022A



ORH-022U



ORH-022B



ORH-022F



ORH-022O



DEAR CUSTOMERS!
MANY THANKS FOR BUYING ORION ULTRASONIC HUMIDIFIER!

We really believe you will get the greatest pleasure from using this device for the years!

Please, read the user's guide in detail before first using of this ultrasonic humidifier

SAFETY GUIDE

- Please, read the safety instructions before first use of this ultrasonic humidifier.
- Make sure, device's voltage suits to local mains voltage.
- Place the humidifier at the level and firm location, to keep the it firm..
- Keep the humidifier away from the stoves or the other heat source, and do not expose it at the sunshine directly.
- Keep the humidifier away from the other Home Appliance, to avoid the mist spray to the Home Appliance directly, and then make it moisten.
- When the humidifier is working, please do not touch the water in the Flume or any component under the water..
- Do not let the humidifier work when there have no water in the Flume.
- Do not use hardware to scrape the transducer.
- If there is exceptional noise or smell, please turn off the the switch and pull out the power plug. If need repairing, it must repair by the professional person.
- Do not let the water get into the Base, it will damage the other inner part.
- Do not let the detergent into mouth and eyes, avoid to let the child touch detergent.
- Do not disassemble the pedestal of main body for repair or adjustment by yourself.
- If the supply cord is damaged, it must be replaced by the professional person.
- Please turn off and pull out the plug before clean or move the humidifier.
- Do not touch the plug with the wet hand, it will occur danger.

Notes:

- This machine only suits for water and its max water capability is: 3,9l.
- A warning of risk of scalding by steam.
- Advice to unplug the appliance during filling and cleaning.
- If the supply cord is damaged, it must be replaced by the professional person.

FUNCTIONS OF ULTRASONIC HUMIDIFIER

1. Power/Humidity light indicator.
2. Waterless light indicator.
3. Mist output adjustment.
4. Cute design to the out-look.
5. Mechanical control.
6. Humidified by ultrasonic with high frequency vibratory.
7. Use the shaded pole motor and the advanced design for anti-noise airway to make it runs quite quietly.
8. Safe to use. Self power off when waterless.
9. Mist spray unit constructed with china and titanium alloy, increase its life time.
10. Use antibiotic engineering plastics, anti-fungus, anti-bacteria.
11. Easy to clean.

OPERATING METHOD

1. Unscrew the water tank cap, fill the water tank with cold and clean water (do not use the hot water). Then screw tight the cap, locate the water tank on the pedestal stably.
2. Connect the plug to power 220V/50Hz.
3. Turn on the switch On/Off, the Power Indicator will light.
4. Turn on the mist adjustment button by clockwise.
5. Adjustment of the mist amount of humidifier, screw the mist adjustment button, it's convenient to adjust to the mist amount.
6. When the Tank lack of water, the inner safety equipment will cut of the power automatically, the Waterless indicator will turn on.


7. If need to continue working, pull out the plug, and re-fill water into the Water Tank.

PARTS OF ULTRASONIC HUMIDIFIER

Central body. Fig. 1.

1. Central body.
2. On/Off Switch.
3. Power cord.
4. Mist adjustment button.
5. Humidity output indication.
6. Red/Green power light.

Attention: Shape of central body depends on model.

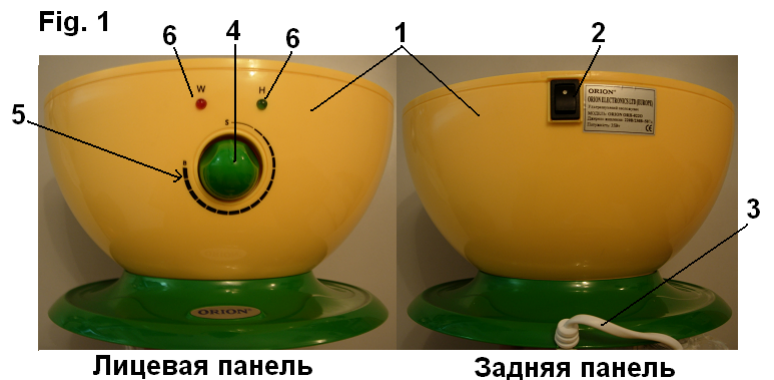

Top of Water tank. Fig. 2.

7. Vapor outlet channel.
8. Water tank handle.


Water basin. Fig. 3.

9. Nebulizer.
10. Vaporization chamber.
11. Fan vent.
12. Water level float.

Fig. 2



Fig.3

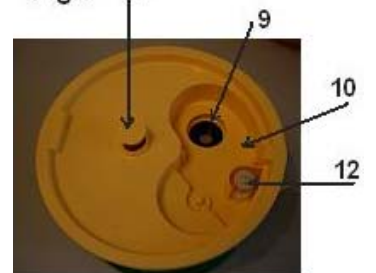

Bottom of Water tank. Fig. 4.

14. Water tank valve.
15. Water tank cap.
16. Vapor outlet channel.

Vapor Outlet Lid. Fig. 5.

17. Vapor outlet lid.
18. Vapor outlet slots.

Attention: Shape of vapor outlet lid depends on model.

Fig. 4


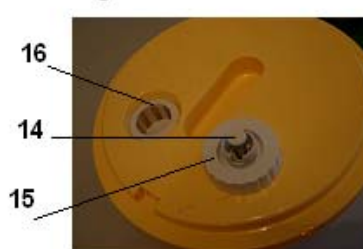


Fig. 5

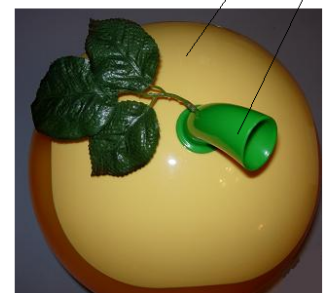

MAINTENANCE AND SAFETY NOTES

Clean the transducer

If hard water in somewhere is used in this machine, some waste or water scale will be left inside the transducer, user need to clean the transducer with soft cloth:

1. Clean it with soft cloth.
2. Clean it two times with water.

Clean the inside part of water tank

1. Drop some detergent into water tank, and load a half of water tank.
2. Screw it with nut cap, shake it up and down several times, and then use water to wash it clean.

Clean the water flume

1. If there is waste left in water flume, use a soft cloth to clean it.
2. Clean the water flume with cleaning water.

Storage

If the machine has not been used for a long time, you should pour out all the remains which left in the water flume and the water tank. Please, wash cleaning, mash it, leave it dry and pack it in box for storage.

TROUBLES DISMISSING

If your humidifier is out of order, please, check it as following before you demands.

Troubles	Method of dismissing
The Power Indicator Lamp is off, without wind or fog.	<ul style="list-style-type: none">• Connect the plug into the socket.• Turn on the switch On/Off.
The Power Indicator Lamp is on, winding but without fog.	<ul style="list-style-type: none">• Lack of water. Fill water into the Tank• The Sensor dobber has not been pressed tightly. Press the dobber tightly.
The Power Indicator Lamp is on but without wind or fog	<ul style="list-style-type: none">• The water into the flume is too high. Spill out some water and make the cover of the Tank tightly.
Strange smell with fog.	<ul style="list-style-type: none">• New machine. Clean the Tank and re-fill the clean water.• The water is dirty. Clean the Tank and re-fill the clean water.
Small rated fog	<ul style="list-style-type: none">• The transducer is dirty. Clean it.• The water is not clean. Change the water with the clean one.
Strange noise	<ul style="list-style-type: none">• The water tank do not placed properly. Set the water tank properly.• The water in the water tank is too little to make noise. Add some water.

TECHNICAL PERFORMANCE

Model:	ORH-022A	ORH-022O	ORH-022U	ORH-022F	ORH-022B
Moisture capacity:			>380ml/h		
Water tank volume:	4,5L	4,5L	4,2L	3,5L	3,5L
Rated voltage:			220V, 50Hz		
Rated power:			35W		
Net weight:	1,61kg	1,61kg	1,05kg	1,33kg	1,1kg
Gross weight:	2,07kg	2,07kg	1,35kg	1,78kg	1,43kg
Box size (mm):	270x270x358	270x270x358	260x260x300	272x267x321	305x218x288

Extra information on ORION company web-site www.orion.ua
We take your opinion and offers by E-mail support@orion.ua